

Beetle Daily Maintenance Process

Bring service robots to every corner of the world!

Clean the interior

HEPA

- Shake the dust-shaking device from side to side.
- Lift and unclip the two trash bin latches, remove the latches, and pull out the trash bin.
- Pull the HEPA filter pins to the sides to lower the holding tray, and then remove the HEPA filter.
- Tap the surface of the HEPA filter with your hand to make the dust fall off. You can also use an air pump to blow away the dust on the HEPA filter.
- When installing, ensure that the vertical ribs of the HEPA filter are aligned with the direction of the machine.









Clean the bottom

Roller brush

- Slide up the roller brush latch, grasp the latches on both sides of the end cap, and pull out the roller brush.
- Use a cutter or other tool to remove the tangled hair or debris.
- When installing, push the roller brush into the slot while inserting the end cap of the roller brush into the securing pin.
- Insert the other end of the roller brush into the securing pin and close the end cap latches.









Trash bin

- Shake the dust-shaking device from side to side.
- Press the handle lift button and pull up the trash bin handle.
- Lift and unclip the two dustbin latches, remove the latches, and pull out the trash bin.
- Grip the trash bin handle and empty the trash inside.
- After rinsing with clean water, it must be completely dried before reinstallation.
- When installing, push the dustbin back in, secure the two latches, and lower the handle to ensure the trash bin is properly locked in place.









Side brush

- Grasp the magnetic disc at the top of the side brush with both hands, press down, and pull out the side brush.
- Use a cutting tool to clean the tangled hair and debris.
- Check if there is any dirt on the magnet of the brush disc, and wipe it clean with a dry cloth to ensure the surface of the magnet is free of dust.
- When installing, align with the slot and push the side brush upwards to snap it in. After installation, shake the side brush to ensure it is secure and does not wobble or fall off.









Clean the Exterior

Exterior shell

- Prepare a wrung-out damp cloth.
- Wipe the exterior in a top-tobottom order
- Avoid wiping the sensors while cleaning.









Sensors

- Prepare a clean, lint-free soft

 cloth
- Wipe the front and rear cameras in order.
- Wipe the left and right cameras, as well as the 3D laser.
- Do not use water for cleaning







