


## Clean the interior

### Clean the Filter Basket

- Lift the robot's head cover and remove the filter basket.
- Disassemble the filter basket and clean each part by rinsing.
- Put back the assembled filter basket after rinsing the water tank.

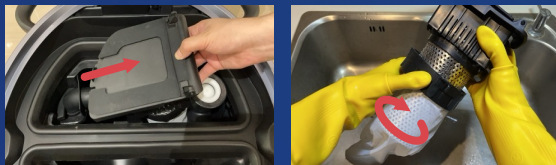


### Clean Filter Caps

- Twist counterclockwise to remove the two filter caps.
- Take out the filter elements and rinse with clean water.
- Reassemble and reinstall filter caps after tank rinse.




### Clean the Mesh Filter

- Twist counterclockwise to remove the two mesh filters.
- Rinse with clean water after removing visible dirt.
- Reinstall after rinsing the water tank.

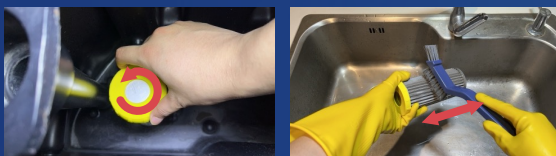

### Rinse the Water Tank

- Place the water gun in the clean water tank and turn on the tap.
- Rinse the tank walls and gauge.
- Drain the waste water by pulling the lever
- Put the water gun in the waste water tank to clean the interior wall and gauge.
- Close the tap and remove the water gun.
- Drain the water using the drainage pipe, and then secure cap tightly.
- Only the upper 10cm edge of the water tank can be rinsed.
- Do not flush water on the tank's waterproof rubber seal.

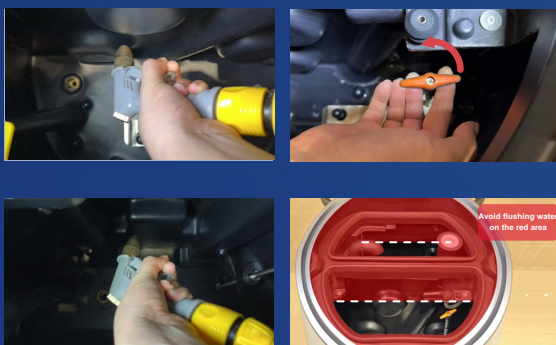

### Clean Waste Suction Pipe


- Remove the rubber elbow from tank.
- Insert the water gun into waste suction pipe and flush water.
- Reattach the rubber elbow after rinsing.



## Clean the bottom

### Clean Side Brushes

- Pinch the base of the side brush and pull it down
- Use a cutter to remove tangled hair
- Hold the side brush and attach it to the axis to be installed.

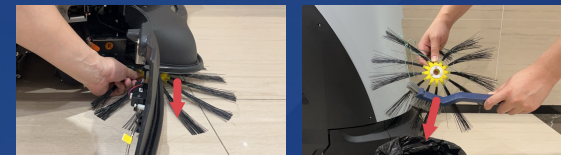

### Clean the Debris Tray

- Open side doors
- Rotate the latch and pull out the two debris trays
- Empty the debris, then push the debris trays back and close the side doors.



### Clean the Roller Brush

- Press the button to unlock, then pull out the brush
- Clean the bristles using a cutter and rinse if it is a roller cloth
- Put the roller brush back and ensure button is locked.



### Clean the Disk Brush

- Press and push down the nut to remove the disk brush.
- Use a stiff brush to clean the edges and remove debris.
- Lift the edge and securely attach the disk brush back.



### Clean the Squeegee

- While pressing the nut, pull out the squeegee blade sideways and wipe it clean.
- Clean any foreign objects from the metal groove of the squeegee.
- Press the nut again and put back the squeegee blade.



## Clean the Exterior


### Wipe the Machine's Exterior

- Use a little damp cloth to wipe.
- Wipe the exterior from top to bottom.




### Clean the Bottom Wheel Assembly

- If robot leaves wheel marks on the floor, use adhesive dust pads.
- Switch the machine to the manual mode.
- Slide back and forth on the dust pad to remove dust on the wheels.

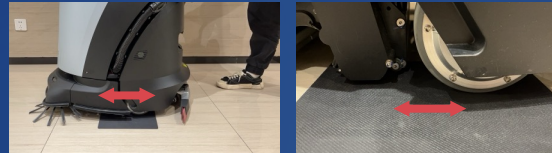

### Wipe the Sensors

- Prepare a clean, soft cloth.
- Wipe the front and rear cameras in sequence.
- Wipe the overall collision shell and the top laser area.

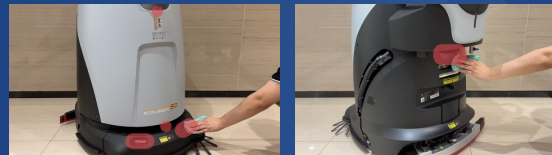

### Wipe the Head Cover Screen

- Use a clean and soft cloth.
- Wipe the screen in circles, moving from the inside to the outside.



### Clean the Workstation

- Disconnect power from the charging dock or workstation.
- Use a little damp cloth to wipe the exterior.
- Take out the foam in the waste water collector to rinse and then put it back.

